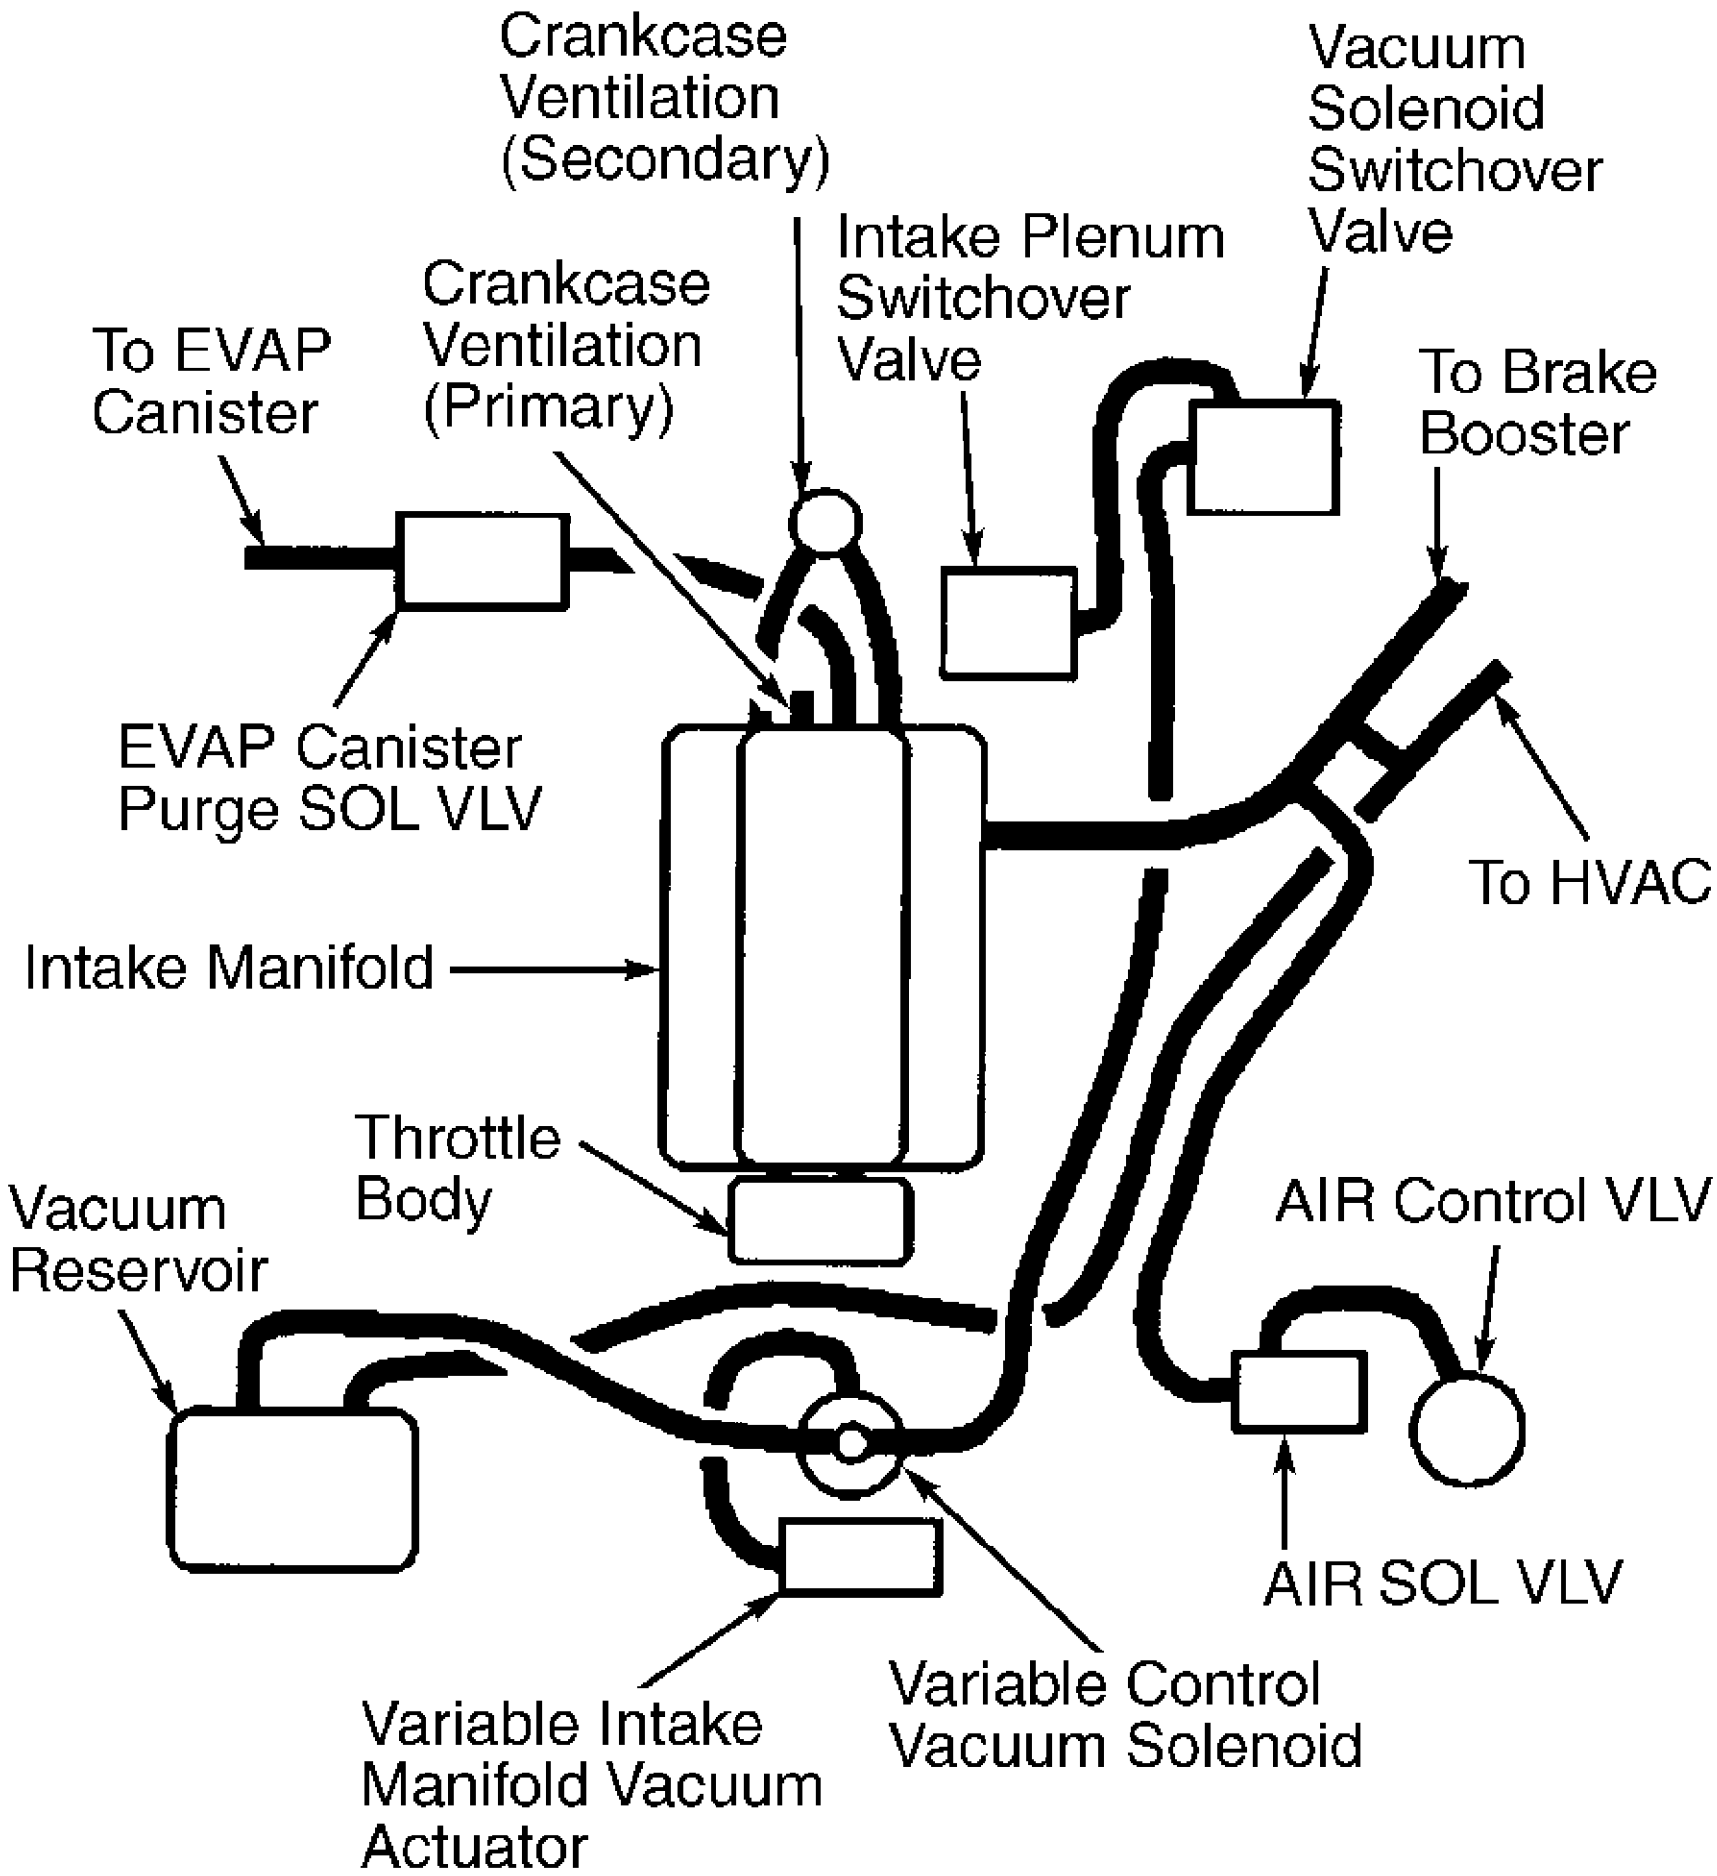
Crankcase Ventilation (Secondary)
Vacuum Solenoid Switchover Valve
Intake Plenum Switchover Valve
Crankcase Ventilation (Primary)
To EVAP Canister
To Brake Booster
EVAP Canister Purge SOL VLV
To HVAC
Intake Manifold
Throttle Body
Vacuum Reservoir
AIR Control VLV
AIR SOL VLV
Variable Control Vacuum Solenoid
Variable Intake Manifold Vacuum Actuator

G00012674